 
 


■ CAMERA INSTALLATION

■ TYPE1



▼ Standard package



Camera




Wrench



Instructions




Screws & wall plugs

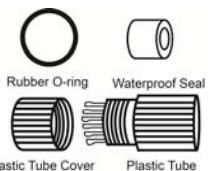


Waterproof kit

Step 1: Loosen the screw as indicated below to move down the camera lens.
Then, fasten the camera to the ceiling or wall where you want to install.

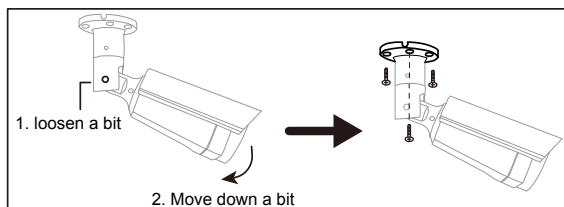


Step 2: Adjust the viewing angle of the camera as indicated below.

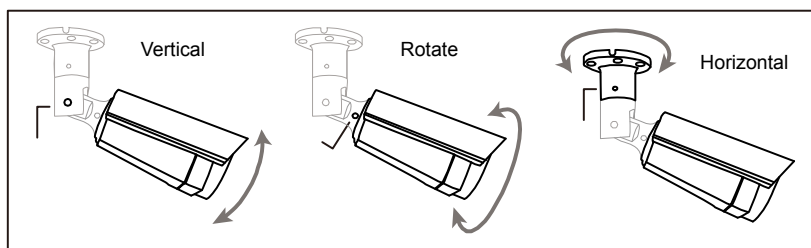

Step 3: Power on the camera and fine-tune the viewing angle. Please go to the section, "**ADJUST FOCAL LENGTH & FOCUS**", for details.

■ TYPE2

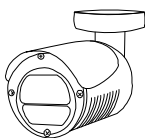

▼ Standard package



Camera





Wrench




Instructions



Screws & wall
plugs


Step 1: Find the wrench supplied in the sales package, and loosen the screw as indicated below to loosen the joint lock of the bracket.

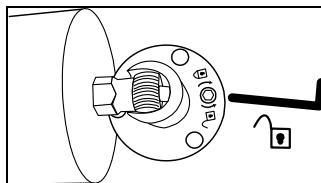Note:  for lock, and  for unlock.




Step 2: Locate where to install this camera, and fasten the bracket to the ceiling or wall.
Then, adjust the viewing angle of the camera, and fasten the screw to secure the joint lock of the bracket.

Note:  for lock, and  for unlock.

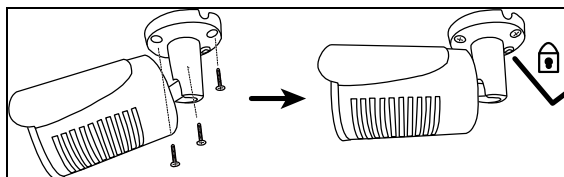


Step 3: Power on the camera and check the viewing angle.

 ■ TYPE3



▼ Standard package

 

Camera



Wrench



Screws & wall plugs



3-pin terminal block



Desiccants



Instructions



Rubber O-ring



Waterproof Seal



Plastic Tube Cover



Plastic Tube

Waterproof kit


Step1: Remove the sun shield from the camera.

Step2: Locate where you want to install this camera, and fasten the camera to the ceiling or wall (Figure 1).

Note: A file for its installation sticker could be downloaded from www.surveillance-download.com/user/c_installation_sticker.pdf.

Note: It's recommended to slightly loosen the screw on the bracket as indicated below to move the camera down a little bit. It's easier for bracket installation.

Step 3: Adjust the viewing angle of the camera, as indicated in Figure 2.

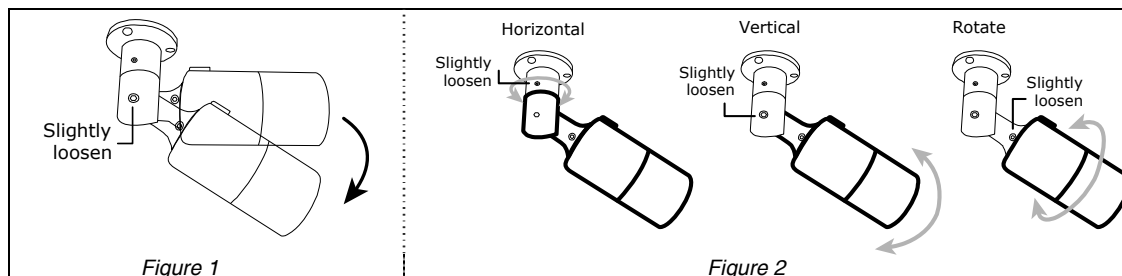



Step 4: Rotate to open the camera front cover, and

- Install a microSD card if needed. See the section of “**INSERT A MICRO SD CARD**” for details.
- Remove the desiccants in the camera, and replace it with the pack of desiccants supplied with the package to ensure the dryness inside the camera.

Step 5: Replace the camera front cover back and make sure it's fastened. Then, fasten the sun shield to the camera with the supplied screw.

Note: In order to make the best performance, please adjust the angle of IR shift up and down within 30 degree respectively, left and right within 15 degree respectively.

Note: If the temperature of the installation environment is under 0°C, 50 minutes or more will be needed for the camera to warm up.

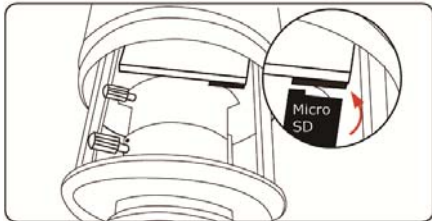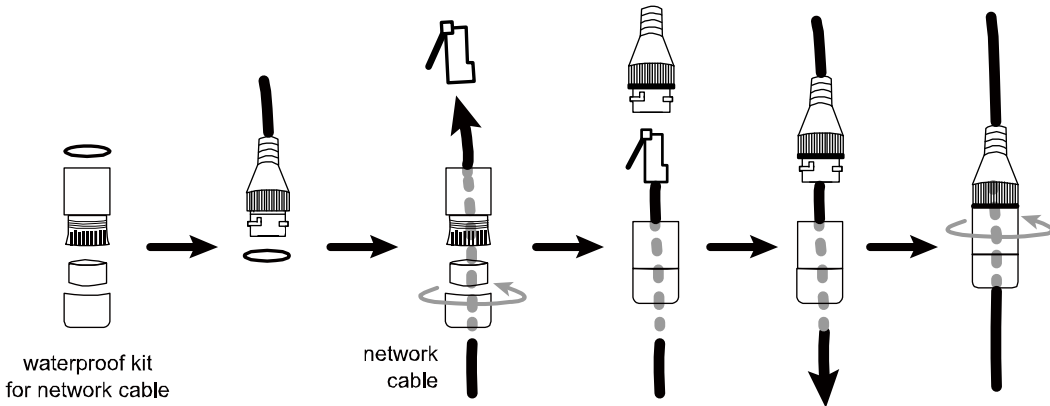
■ CABLE		■ DEFAULT VALUES		■ ADJUST FOCAL LENGTH & FOCUS (For motorized-lens models only)																																			
<table><tr><th>Cable</th><th>Description</th></tr><tr><td>Power cable</td><td>DC12V power supply.</td></tr><tr><td>RJ45 network cable*</td><td>Connect it to a RJ45 cable.</td></tr><tr><td>GND</td><td>Used with external alarm device connection or hardware reset.</td></tr><tr><td>RESET</td><td>Reserved for hardware reset. Remove the insulating coating of the wire, and twist it with the GND wire together to reset the camera to ifs factory values.</td></tr><tr><td>Alarm-in**</td><td rowspan="2">Reserved for external alarm device connection.</td></tr><tr><td>Alarm-out**</td></tr><tr><td>Line-in**</td><td>Colored as blue, used to connect to a microphone for audio input.</td></tr><tr><td>Line-out**</td><td>Colored as green, used to connect to a speaker for audio output.</td></tr></table> <p><small>* For PoE (IEEE802.3af) installation, make sure your network cable has the maximum cable resistance of 20Ω, such as CAT.5e or CAT.6 cables, to conform to the standard of IEEE802.3af. ** Optional</small></p>		Cable	Description	Power cable	DC12V power supply.	RJ45 network cable*	Connect it to a RJ45 cable.	GND	Used with external alarm device connection or hardware reset.	RESET	Reserved for hardware reset. Remove the insulating coating of the wire, and twist it with the GND wire together to reset the camera to ifs factory values.	Alarm-in**	Reserved for external alarm device connection.	Alarm-out**	Line-in**	Colored as blue, used to connect to a microphone for audio input.	Line-out**	Colored as green, used to connect to a speaker for audio output.	<table><tr><td>IP address</td><td>192.168.1.10</td></tr><tr><td>Port number</td><td>88</td></tr><tr><td>User name</td><td>admin</td></tr><tr><td>Password</td><td>admin</td></tr></table> <p>It's strongly recommended to change the default user name and password before using the camera to keep your account safe.</p> <p>To change the default account, log into the camera, and go to Config. → General → Account. You can create a new account and remove the default one if needed.</p>		IP address	192.168.1.10	Port number	88	User name	admin	Password	admin	<p>To remotely adjust focal length and focus of the camera, access the camera from Internet Explorer.</p> <p>Note: The default camera IP address is 192.168.1.10, the port number is 88, and the user name and password are both admin. To search the IP address and port number, you could download our IP scan tool from www.surveillance-download.com/user/m5547.swf</p> <p>In the tab of “Live View”, you'll see the icons in the control panel area as below:</p> <table><tr><td></td><td>Zoom Tele / Zoom Wide</td><td>Click to zoom in on the image to the largest / zoom out on the image to its original size.</td></tr><tr><td></td><td>Max Zoom Tilt / Max Zoom Wide</td><td>Click to zoom in / out the image.</td></tr><tr><td></td><td>Focus Far / Near</td><td>Click to adjust the focus of the image.</td></tr></table> <p>Note: You can also adjust the focal length and the focus by accessing to the NVR with PTZ controlling. For more detail, please refer to the NVR manual.</p>			Zoom Tele / Zoom Wide	Click to zoom in on the image to the largest / zoom out on the image to its original size.		Max Zoom Tilt / Max Zoom Wide	Click to zoom in / out the image.		Focus Far / Near	Click to adjust the focus of the image.
Cable	Description																																						
Power cable	DC12V power supply.																																						
RJ45 network cable*	Connect it to a RJ45 cable.																																						
GND	Used with external alarm device connection or hardware reset.																																						
RESET	Reserved for hardware reset. Remove the insulating coating of the wire, and twist it with the GND wire together to reset the camera to ifs factory values.																																						
Alarm-in**	Reserved for external alarm device connection.																																						
Alarm-out**																																							
Line-in**	Colored as blue, used to connect to a microphone for audio input.																																						
Line-out**	Colored as green, used to connect to a speaker for audio output.																																						
IP address	192.168.1.10																																						
Port number	88																																						
User name	admin																																						
Password	admin																																						
	Zoom Tele / Zoom Wide	Click to zoom in on the image to the largest / zoom out on the image to its original size.																																					
	Max Zoom Tilt / Max Zoom Wide	Click to zoom in / out the image.																																					
	Focus Far / Near	Click to adjust the focus of the image.																																					
■ INSERT A MICRO SD CARD (For selected models only)		■ WATERPROOF KIT (For selected models only)																																					
<p>The data originally saved in the micro SD card (if any) will be removed after inserting it to the camera.</p> <p>The camera doesn't support hot-swapping. Please insert or remove the microSD card with power disconnected.</p> <p>Step1: With the front cover removed, find the microSD card slot in the camera.</p> <p>Step2: Follow the direction in the figure below to insert the MicroSD card properly:</p> <div></div> <p>Note: It's recommended to use a pair of tweezers for inserting / removing MicroSD card.</p> <p>Step 3: Screw back the front cover.</p> <p>Note: Please do put the rubber gasket back on the right position in case of water penetration.</p>		<div></div> <p>waterproof kit for network cable</p> <p>network cable</p>																																					

CAMERA CONFIGURATION

Step1: Connect this camera to your NVR as described in "HD System Connection".

Step2: Connect PC to the HUB connected to your camera(s) with RJ45 network cable.

Step3: Search available devices with "IPScan.exe"; to download "IPScan.exe", please visit www.surveillance-download.com/user/IPscan.zip.

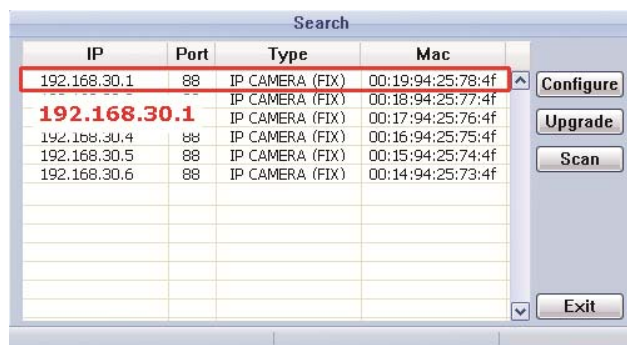

Step4: After searching, set your PC in the same network segment as the specific camera you want to access, such as "192.168.30.xxx" (xxx could be 0~255) in our example

Step5: Note down the IP address and port number of the camera you want to access, such as "192.168.30.1" and "88" in our example.

Step6: Open Internet Explorer on the PC, and enter the IP address and port number in the URL column to access the camera. The format is http://ipaddress:portnum, such as http://192.168.30.1:88 in our example.

Step7: Enter the default user name (admin) and password (admin) to access the camera. Then, go to "Config" on the top right corner for more advanced configurations.


SYSTEM CONNECTION

1. Connect IP cameras and a monitor to the NVR, and power on the NVR, as illustrated below.

Note: Local connection only allows monitoring locally. To monitor from anywhere other than the NVR is installed, please connect your NVR to Internet.

Type1

Connect IP cameras
(as many as the NVR supports):

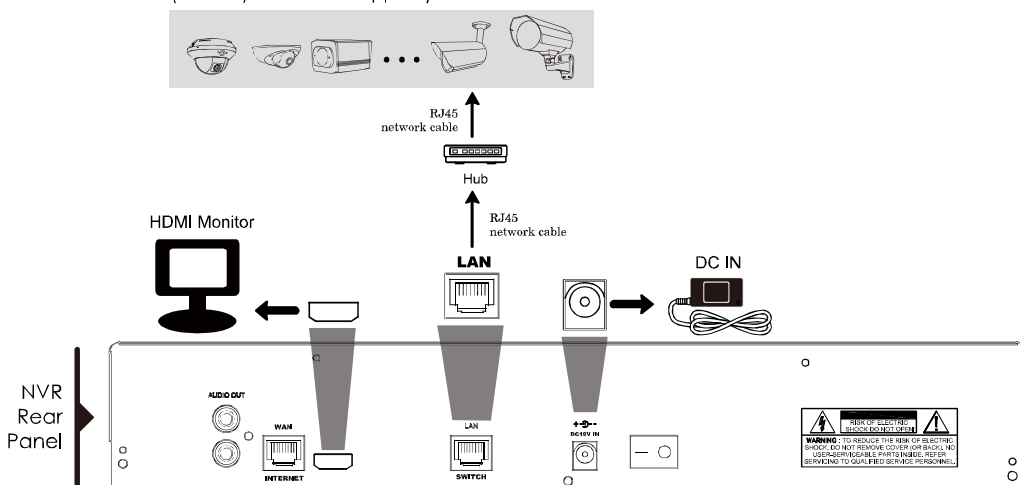


2. Wait till each camera is configured automatically and you will see camera images on the monitor soon.

Note: Local connection only allows monitoring locally. To monitor from anywhere other than the NVR is installed, please connect your NVR to Internet.

Type2

Connect IP cameras
(as many as the NVR supports):

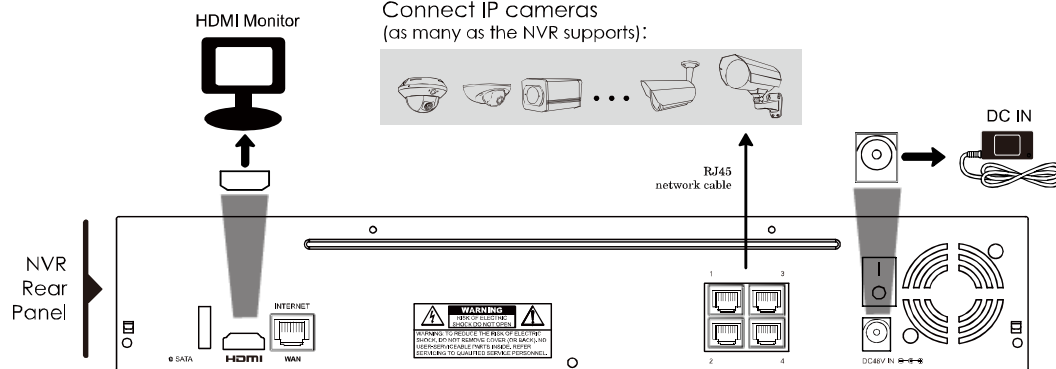

Free CMS
(CMS Lite)



Complete
User Manual