

MULTI-CARD READER/WRITER USER MANUAL

MODELS 100939 & 100946



Thank you for purchasing the MANHATTAN® Multi-Card Reader/Writer, Model 100939 (black) or Model 100946 (blue).

Convert any unused PC bay into a digital content management center that lets you access picture files from memory cards without directly connecting a camera or other media device to the computer. Follow the simple instructions in this user manual and enjoy the benefits of these convenient features:

- Easily access media and manage content almost anywhere
- Includes USB mass-storage capabilities
- Compatible with CompactFlash, Microdrive, Memory Stick, MagicGate, SecureDigital and Multimedia
- Supports automatic card detection and data transfer speeds up to 480 Mbps
- Eliminates the need for a direct connection of a media device to save battery power
- Windows and Mac compatible — hot swappable, Plug and Play
- Lifetime Warranty

INSTALLATION

1. Using the included USB cable, connect the Multi-Card Reader/Writer to a USB port on your computer. Double-click on "My Computer" to confirm that a removable disk icon appears.
2. Check that the green Power LED lights to confirm a proper connection.
3. Insert your storage card in the appropriate reader slot to use the card reader function.
4. Check that the Power LED changes to red to indicate the device is ready for operation.
5. Double-click on the corresponding icon to read or write desired files to or from your computer or storage card.
6. Check that the Power LED flashes to indicate the operation is in progress.

Memory Card Formatting:

XD users may need to format the memory card prior to use, indicated by a "write protection" or "read/write error" message. If this is the case, follow the steps below to use the Flash Ranger tool for formatting the memory card.

1. Go to "Start" → "Programs" → "Multimedia Card Reader" → "Flash Ranger."
2. Select the XD icon, then click "Low Level Format."
3. When prompted with "Low level format is completed. Please remove the card," click "OK" and remove the memory card.
4. Re-insert the memory card and continue using the Multi-Card Reader/Writer.

SPECIFICATIONS

Standards and Certifications

- Hi-Speed USB 2.0, USB 1.1, CE, FCC

General

- LED: Power/activity
- Transfer rates: 480 Mbps / 12 Mbps / 1.5 Mbps
- Material: plastic

Physical

- Textured matte finish
- USB type A male to mini B male extension cable, 1 m (3.3 ft.)
- Dimensions: 10.5 x 1.8 x 6 cm (4.1 x 0.7 x 2.4 in.)
- Weight: 62.4 g (2.2 oz.)

System Requirements

- USB port
- Windows 2000/XP/Vista, Mac 10.4.5 or higher
- Supports CompactFlash Type I/II, CF 3.0, CF 4.0, CF Elite Pro, CF High Speed, CF PRO I/II, Extreme CF, Extreme III CF, Ultra II CF, XS-XS CF, IBM and Hitachi Microdrive, MagicStor, Memory Stick, Memory Stick Duo, Memory Stick Extreme III PRO, Memory Stick Extreme PRO, Memory

Stick Micro (M2), Memory Stick PRO, Memory Stick PRO Duo, Memory Stick PRO HG, Memory Stick ROM, Memory Stick Select, Memory Stick Ultra II PRO, High Speed Memory Stick PRO, High Speed Memory Stick PRO Duo, MagicGate, MagicGate Duo, MagicGate PRO, MagicGate PRO Duo, High Speed MagicGate PRO, High Speed MagicGate PRO Duo, SecureDigital (SD), Elite Pro SD, Extreme SD, Extreme III SD, High Speed miniSD*, High Speed SD, microSD / TransFlash, miniSD*, Pro SD, SDHC, Ultra SD, Ultra II SD, Ultra II SD Plus, Ultra Speed SD, Ultra-X SD, MMC / MMC 4.0 / MMC 4.2, RS-MMC*, High Speed MMC / RS-MMC*, RS-MMC 4.0*, MMCmobile*, MMCplus*, XD / XD 1.21

** Adapter required*

Package Contents

- Multi-Card Reader/Writer
- USB extension cable
- User manual



MANHATTAN® offers a complete line of PC Components, Peripherals, Cables and Accessories. Ask your local computer dealer for more information or visit us online at

www.manhattan-products.com

Copyright © MANHATTAN

All products mentioned are trademarks or registered trademarks of their respective owners.