

Mini Wi-Fi AP/Repeater



Quick Installation Guide (Q.I.G)



REV.1

This product includes software codes developed by third parties. These software codes are subject to either the GNU General Public License (GPL), version 2, June 1991 or the GNU Lesser General Public License (LGPL), version 2.1, February 1995. You can copy, distribute, and/or modify in accordance with the terms and conditions of GPL or LGPL.

The source code should be complete, if you want us to provide any additional source code files under GNU General Public License (GPL), please contact us. We are committed to meeting the requirements of the GNU General Public License (GPL). You are welcome to contact us local office to get the corresponding software and licenses. Please inform us your contact details (full address) and the product code. We will send you a CD with the software

Please refer to the GNU GPL Web site for further information. http://www.gnu.org/licenses.en.html

The Device is mainly used for providing free Wi-Fi service in big area such as factory, community, street, etc. The Device can take an existing 802.11n wireless signal, repeat and extend it to a longer range where it is too far away for the router or access point to reach. The device supports 2.4G wireless network connection, and it can supports 2.4G transmission speeds of up to 300Mbps. It has 2 x Antennas providing even better wireless performance transmission rates, stability technology automatically avoids channel conflicts using its channel selection feature.

Before you starting to use this router, please check if there's anything missing in the package, and contact your dealer of purchase to claim for missing

- 1 x Wi-Fi AP/Repeater (the Device)
- 1 x Quick Installation guide

Package Contents

Wireless AP Mode

TDC-5864

TDC-9864

TDC-6468

Wireless-S

Default IP: 192.168.10.1


URL: http://ap.setup

Login Password: admir Wi-Fi Kev: no Wi-Fi SSID: Wireless-N

Mini series:

- Power On/Off button
- I AN Port
- 3 WPS /Reset button Press 6 Seconds, Reset the Device Press 1-2 Seconds, connect to your AP/Router WPS for Client connection, not supported
- Status LED

ON: The Device is power on, working properly OFF: The Device is not receiving electrical power Slow Flashing: The Device network is disconnected Fast Flashing: The Device WPS connecting to your AP/Router

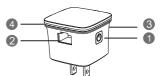

Operate Frequency: 2.412G-2.484G EIRP Power (Max.): <20DBm

Getting Started

Setting up a Wireless Infrastructure Network

For a typical wireless setup at home (as shown below), please do the

Wireless AP Mode

The Device is connected to a wired network than transforms the wired Internet access into wireless so that multiple devices can So this mode is fit for office, home and

places where only wired network is available.



Wireless Repeater Mode

The Device is copies and reinforces the existing wireless signal to extend the coverage of the signal. This mode is especially useful for a large space to eliminate signal-blind corners.

So this mode is fit for large house, office, warehouse or other spaces where the existing signal is weak.







Configure the Wi-Fi Repeater Mode

Configure the Wi-Fi Repeater Mode with WPS Button

This is the easiest way to configure the Device. First, check whether your wireless router supports WPS. For further details, please read the operating instructions for your wireless router.







Tips: if you want to keep the stable connection between your router and our repeater at REPEATER mode, Please install our Repeater at a suitable position. You can check the suitable position as the followings: You can check the Wi-Fi signal on your smartphone, if the signal is below 2 levels, we suggest to change the location of our repeater.

- 1. Plug the Device into a wall socket.
- 2. Press the WPS button on the Device for 1-2 seconds. The WPS LED fast flashing for approx. 2 minutes.
- Within these 2 minutes, please Press the WPS button of your wireless Router directly for 2-3 seconds. (For further details, please read the operating instruction for your wireless router)

The Device that automatically connect to your wireless router and copies wireless key of the settings. The device Wi-Fi Password same your

After the reboot has been completed, please go to your device WLAN setting, connect to new SSID.

You can configure the Wi-Fi Repeater Mode by connecting it with your computer/laptop with RJ45 cable or wirelessly

A. Configure the Wi-Fi Repeater Mode wirelessly

A1. Plug the device into a wall socket.



Wireless-N. Click on "Connect" then wait for a few seconds.

A3. Open web browser and type http://192.168.10.1 or http://ap.setup in the browser address box. This number is the default IP address for this device



Note: Please check whether the Device accord with factory default settings once you can't entered http://192.168.10.1 or http://ap.setup. If you are still not sure what reasons, you can reset the Device, just need to press the reset button.

A4. The login screen below will appear. Enter the Password then click "Login" to login. The default Password is "admin".



A5. After logging in, you will see the web page below, click on the Wizard



WN519N2-A说明书中性-V1

尺寸: 83x110mm 105铜版彩色,折叠

A6 Click on the Reneater



A7. From the list, select a Wi-Fi SSID. After having selected a Wi-Fi SSID, you must then specify the password of your wireless router.



Completing the entry, click on the "Connect" button. After the reboot has been completed, please go to your device WLAN setting, connect to new Wi-Fi SSID.

B. Configure the WI-Fi Repeater Mode with RJ45 cable.

- 1. Plug the Device into a wall socket. Connect your computer / laptop with the Device with RJ45 cable.

 2. Follow process A3 to A7 to configure the Device.

Change Management password

browser:

for help.

Firmware upgrade

Default password of the device is "admin", and it's displayed on the login prompt when accessed from web browser. There's a security risk if you don't change the default password, since everyone can see it. This is very important when you have wireless function enabled.

To change password, please follow the following instructions: Please click "Setup -> System safety" menu on the web management interface, the following message will be displayed on your web browser



12

Click "Apply" button, the Device will log off.

Configure the Wi-Fi AP Mode

Use the AP Mode to obtain a "wireless access point". The wireless end devices will connect to the Device In this mode. You can also use this mode. for example, to make a formerly non-wireless-enabled router wireless-enabled.



- 1. Plug the Device into a wall socket.
- 2. Follow process A2 to A5.
- 3. Click on the AP button



The system software used by this router is called "firmware", just like any

applications on your computer, when you replace the old application with a

this firmware upgrade function to add new functions to your router, even fix

Please click "Setup-> upgrade Firmware" located at the web management

interlace, and then the following message will be displayed on your web

Click "Browse..." or "Choose File" button first; you'll be prompted to provide the filename of firmware upgrade file. Please download the latest

After a firmware upgrade file is selected, click "Apply" button, and the device

browser or physically disconnect your computer from the device.

If the firmware you uploaded is interrupt, the firmware upgrade will

fail, and you may have to return the device to the dealer or purchase to ask

NOTE: Never interrupt the upgrade procedure by closing the web

firmware file from our website, and use it to upgrade your router.

The procedure may take several minutes, please be patient.

Warranty voids if you interrupted the upgrade procedure.

will start firmware upgrade procedure automatically.

new one; your computer will be equipped with new function. You can also use

The following message will be displayed on your web browser:



| SSID | Wireless SSID of the Device |
|---------------|---|
| Security type | Setup the wireless security and encryption to prevent from unauthorized access and monitoring. Supports WPA. WPA2. WPA/WPA2 encryption methods. |
| Security key | The "Wi-Fi Password" of the Device |

Click on "Apply" button, the Device will restart.

After the reboot has been completed, please go to your device WLAN setting, connect to new Wi-Fi SSID.

10

Management via Web Browser

Wireless Base Configuration

Please follow the following instructions: Click "Wi-Fi -> Wi-Fi Setup" located at the web management interface, the following message will be displayed on vour web browser:

You could configure the basic setting or Wireless settings for communication. such as Network Name (SSID) and Channel. The Access Point cart be set simply with only the minimum setting items.



| Wireless Status | Wireless On/Off |
|-----------------|---|
| SSID | Wireless SSID of the Device |
| Security type | Setup the wireless security and encryption to prevent from unauthorized access and monitoring Supports WPA, WPA2, WPA/WPA2 encryption methods |
| Security key | The "Password" of the Device |


Click "Apply" button, The Device will restart.

11

How to connect your computer / laptop vith the device

Wireless Base Configuration

- 1. Log on to the computer.
- 2. Open Connect to a Network by right-in the notification area.
- 3 Choose the wireless network from the list that appears, and then click "Connect"
- 4. Type the network security key or passphrase it you are asked to do so, and then click OK. You'll see a confirmation message when you are connected to the network

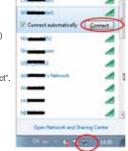

5. To confirm that you added the computer, do the following: Open Network by clicking the Start button , and then clicking "Control Panel". In the search box, type "Network", and then, under Network and Sharing Center, click "View network computers and devices". You should see icons of the other computers and devices that are part or the network.

Note: It you don't see icons in the Network folder, then network discovery and file sharing might be turned off.

Adding a wireless computers to the Device with WPS button

This is the easiest way to establish a connection to the AP. First, check whether your end device supports WPS. For further details, please read the operating instructions for your end device.

- 1. Log on to the computer.
- 2. Press the WPS button on the device for 2 seconds. The WPS LED now flashes for approx. 2 minutes.
- 3. Within these 2 minutes, please press the connection button (WPS) on your end device, (For further details, please read the operating instructions for your end device.)

Your end device then automatically connects to the Device and applies all of the settings. You should see icons after the computer you added and for the other computers and devices that are part of the network.

Adding a wired (Ethernet) computer to the Device

- 1. Plug the device to a socket. Connect your computer / laptop to the device with RJ45 cable
- 2. To confirm that you added the computer, do the following: Open Network by clicking the "Start" button , and then clicking "Control Panel". In the search box, type "Network", and then, under Network and sharing center, click "View network computers and devices". You should see icons a for the computer you added and for the other computers and devices that are part of the network.



In compliance with EU Directive WEEE this product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collections system for these products in compliance with WEEE directive, otherwise contaminative and hazardous substances can pollute the environment.



With the CE sign. Techly® ensures that the device is complies with the requirements of directives 2014/53/EU.

13

14

15